

FOG LAMP ASSY LH


OVERHAUL

6512E-01

HINT:


- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.

1. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSY LH (SEE PAGE 76-2)

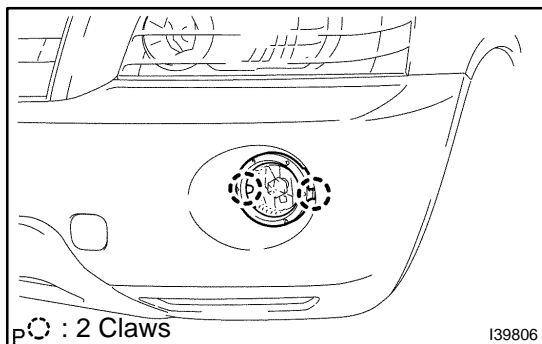


2. REMOVE FOG LAMP PROTECTOR LH

- (a) Disengage the 2 claws, and remove the fog lamp protector RH.

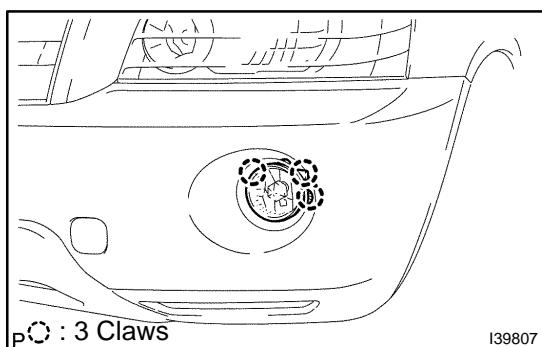

3. REMOVE FOG LAMP ASSY LH

- (a) Disconnect the connector.
 (b) Disengage the 3 claws, and remove the fog lamp assy LH.

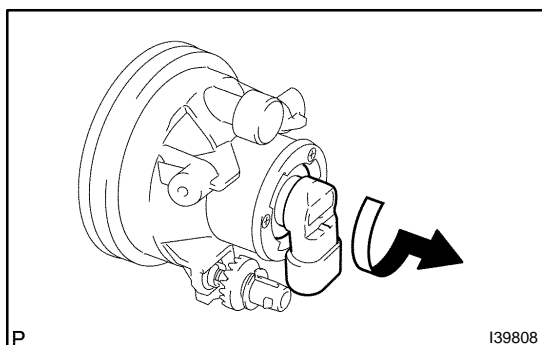

4. REMOVE FOG LAMP BULB

- (a) Remove the fog lamp bulb as shown in the illustration.

5. REMOVE BEARING FOG LAMP

6. REMOVE FOG LAMP LAMP UNIT LH

7. VEHICLE PREPARATION FOR FOG LAMP AIM ADJUSTMENT (SEE PAGE 65-19)

8. PREPARATION FOR FOG LAMP AIMING (SEE PAGE 65-19)

9. FOG LAMP AIMING INSPECTION (SEE PAGE 65-19)

10. FOG LAMP AIMING ADJUSTMENT (SEE PAGE 65-19)