


Audio System with 6 Speaker

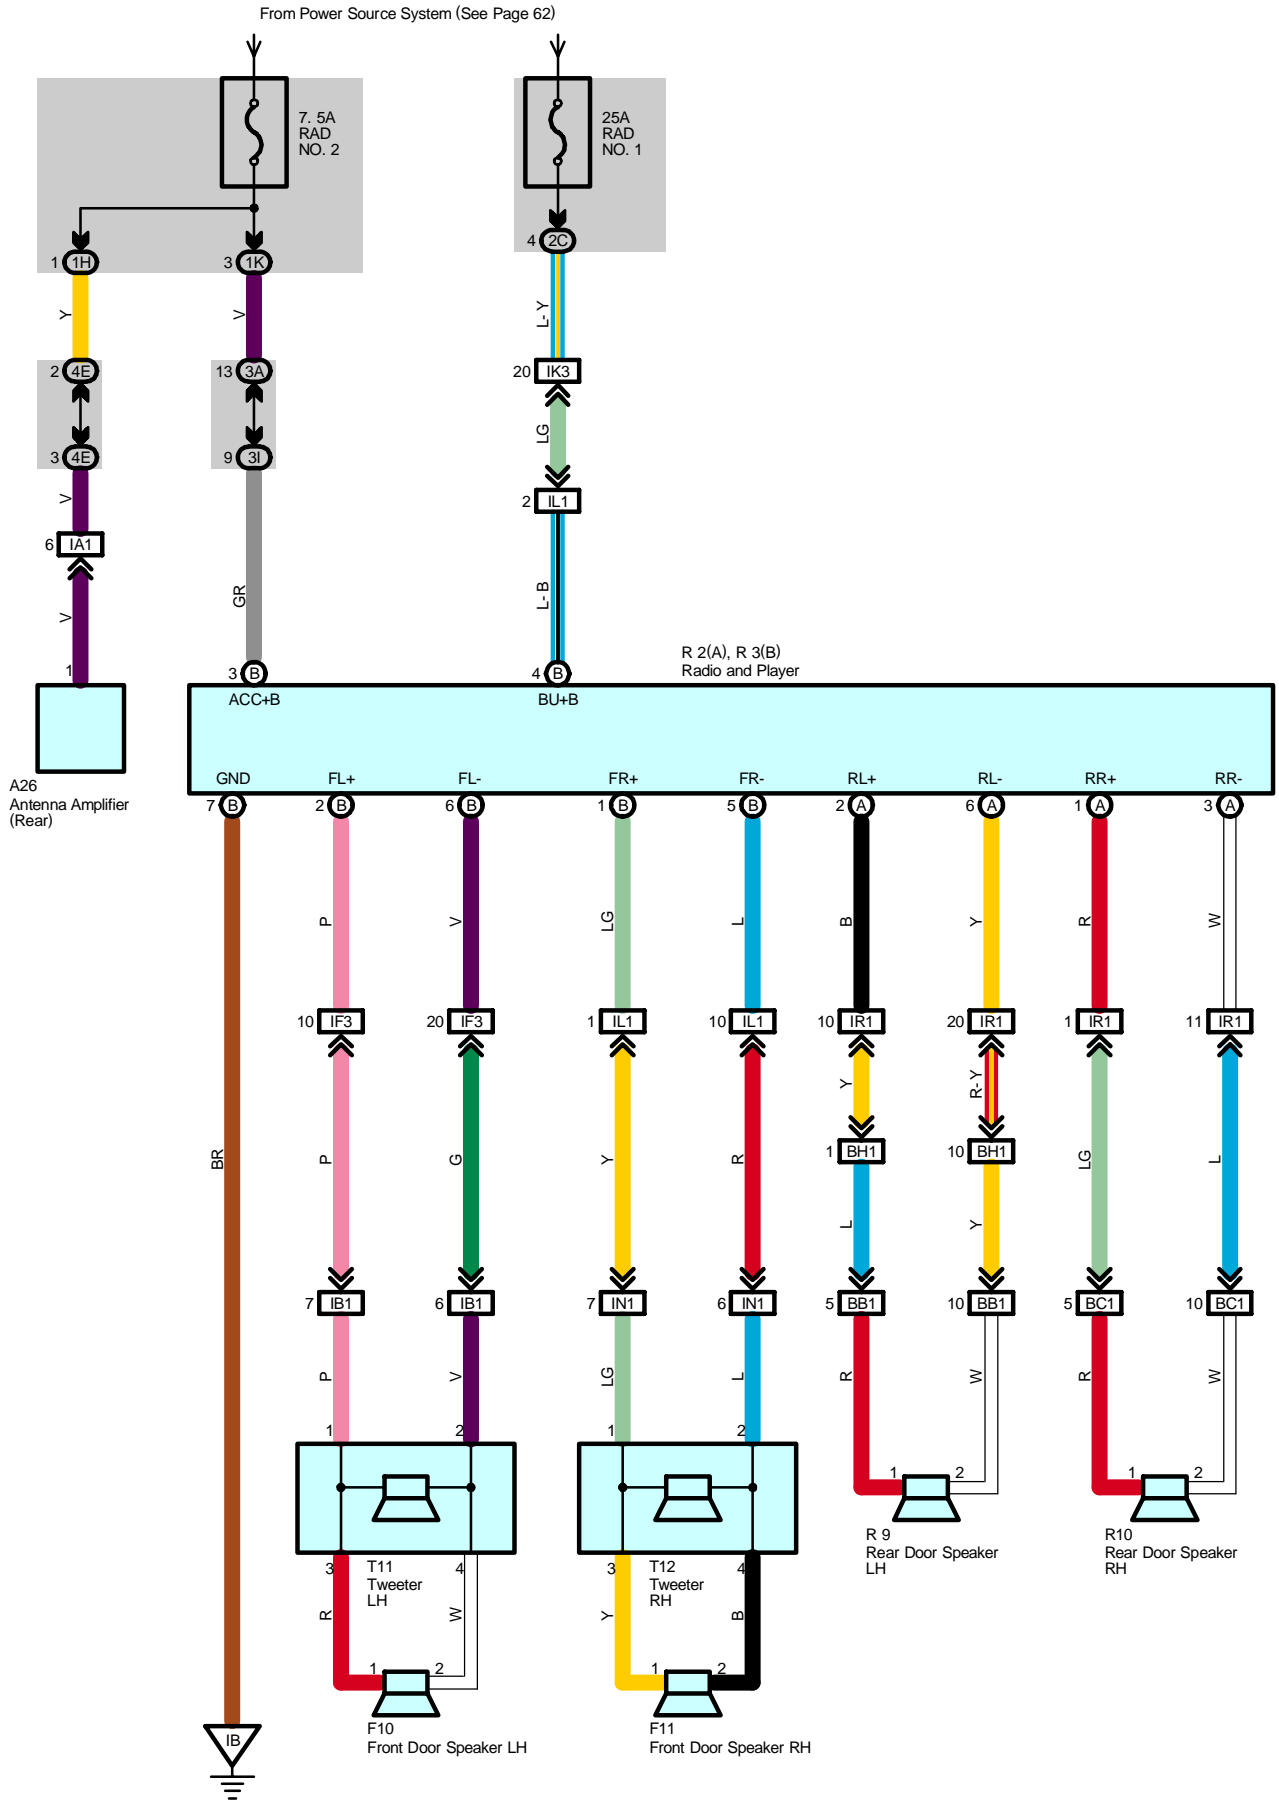

Service Hints

R3 (B) Radio and Player

- (B) 4-Ground : Always approx. 12 volts
- (B) 3-Ground : Approx. 12 volts with the ignition SW at ACC or ON position
- (B) 7-Ground : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page	
A26	44	R2	A	43	R10	45
F10	44	R3	B	43	T11	45
F11	44	R9		45	T12	45

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1H	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1K	28	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
2C	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3A	30	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3I	31	
4E	33	Cowl Wire and Passenger Side J/B (Right Side of Groove Box)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	52	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IB1	52	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IF3	52	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IK3	54	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IL1	54	Instrument Panel Wire and Cowl Wire (Upper Side of Passenger Side J/B)
IN1	54	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IR1	54	Instrument Panel Wire and Floor Wire (Under the Shift Lever)
BB1	56	Rear Door No.1 LH Wire and Floor No.2 Wire (Left Center Pillar)
BC1	56	Rear Door No.1 RH Wire and Floor Wire (Right Center Pillar)
BH1	56	Floor No.2 Wire and Floor Wire (Near the Rear Side Marker Light RH)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IB	52	Right Instrument Panel Brace