

Steering Wheel Paring Manual



www.roadrover.cn/e




Document No. RR 2010005

Publication, Duplication, or Retransmission Of This Document Not Expressly Authorized In Writing By Road Rover Is Prohibited.



Step



1

Power on your unit, enter into the main menu interface. Then, press the button **MENU** or  for a few seconds until it goes to the pairing interface.



Step

2

Press the button  or  on the plastic panel to select the function you want to pair. And then, follow the detailed instructions to complete the pairing.




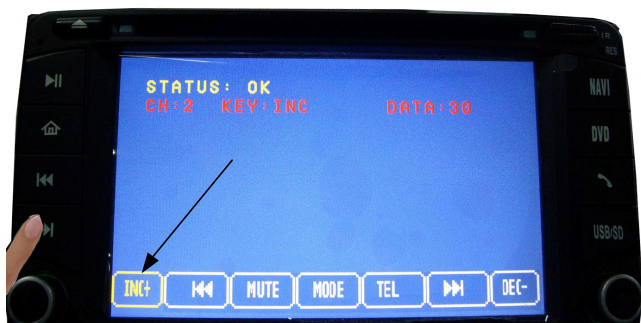
► Volume Increase Function Pairing



Press the button  or  to select volume increase icon on screen.






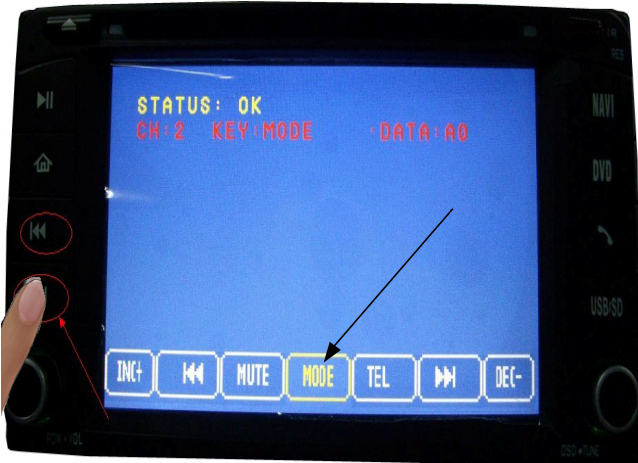
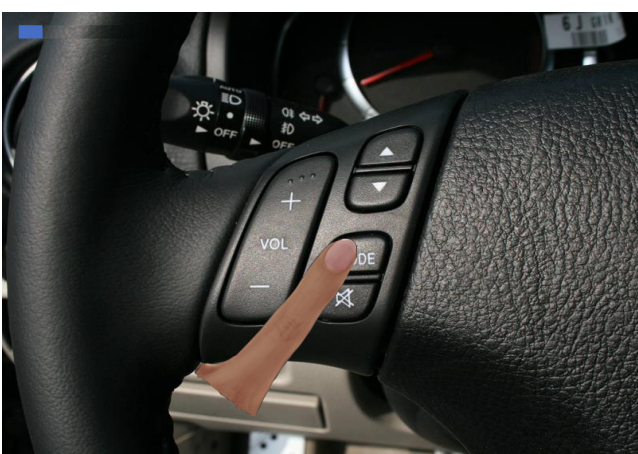
Then extended press the button  on the steering wheel until there is a message says OK.








▶ Volume Decrease Function Pairing

- ✎ Press the button  or  to select volume decrease icon on screen.
- ✎ Then extended press the button  on the steering wheel until there is a message says OK.





▶ Mode Function Pairing

- ✎ Press the button  or  to select mode icon on screen.
- ✎ Then extended press the button  on the steering wheel until there is a message says OK.






▶ Mute Function Pairing

✎ Press the button  or  to select mute icon on screen.

✎ Then extended press the button  on the steering wheel until there is a message says OK.

▶ Previous Function Pairing


✎ Press the button  or  to select previous icon on screen.

✎ Then extended press the button  on the steering wheel until there is a message says OK.



▶ Next Function Pairing

✎ Press the button  or  to select next icon on screen.

✎ Then extended press the button  on the steering wheel until there is a message says OK.



Step
3

When all the steering wheel functions are paired, extended press the button  or  to save and exit the pairing interface.

Step
4

Check if all functions are available to work or not, if not, get them paired again.

..... **END**